


Seat Ventilation and Heating, Rear , (4A4),(KU0),(KU1),(KU2),(4D1)

From June 2011

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



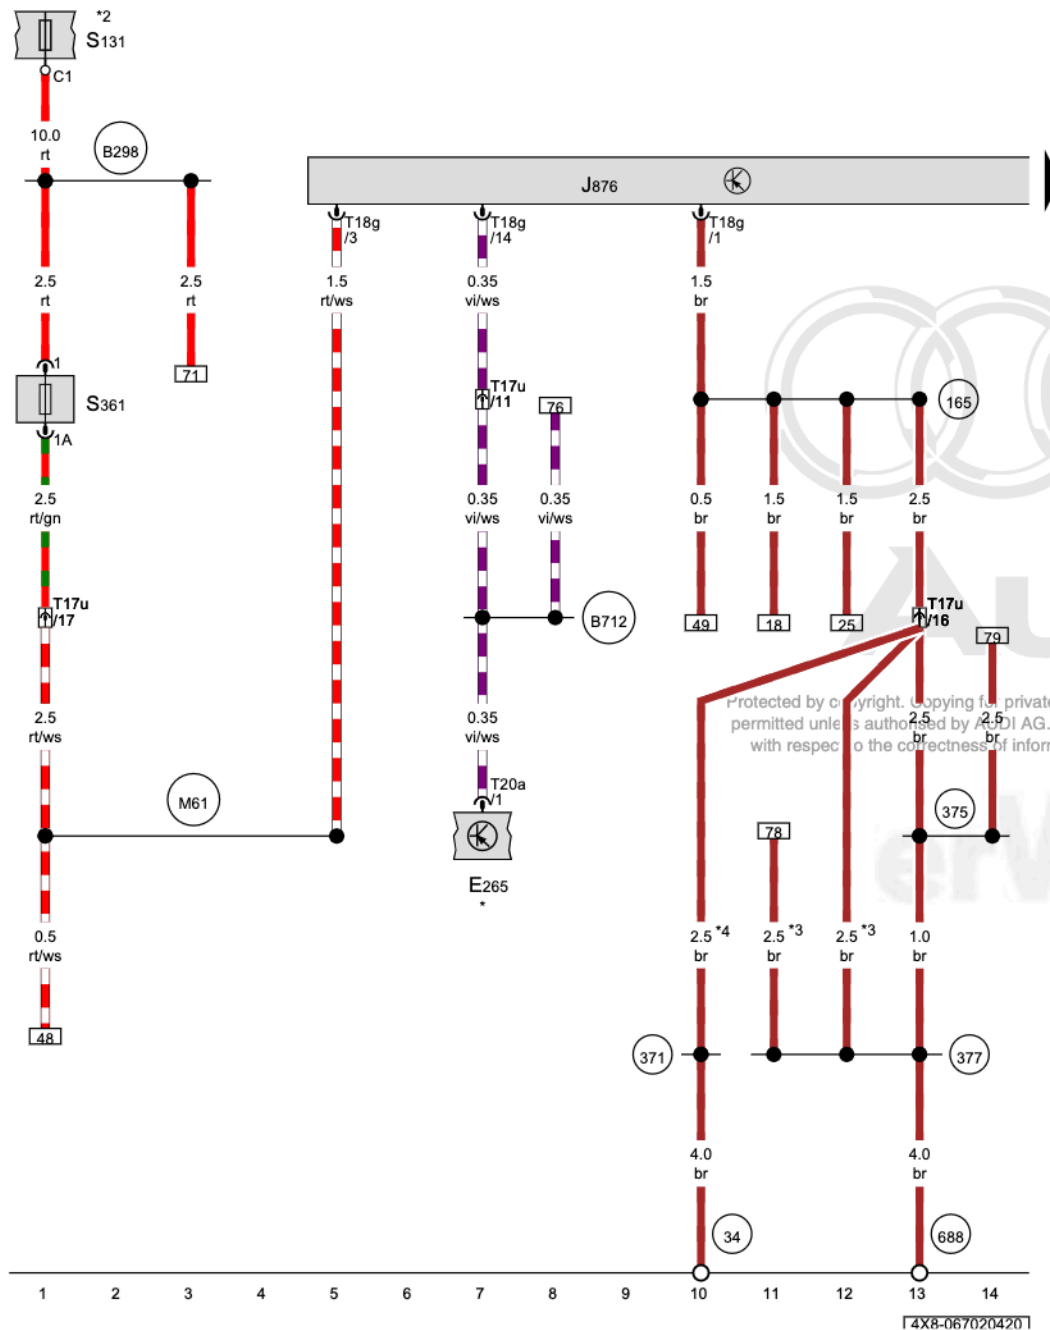


Driver Side Rear Seat Adjustment Control Module

- E265 Rear A/C Display Control Head
- J876 Driver Side Rear Seat Adjustment Control Module
- S131 Safety Fuse 1
- S361 Circuit Breaker 1, On the Relay and Fuse Panel in the Luggage Compartment, Right
- T17u 17-Pin Connector, In the Coupling Point for the Left Rear Seat
- T18g 18-Pin Connector
- T20a 20-Pin Connector

- 34 Ground Connection Under Driver Seat
- 165 Ground Connection 1 (in Rear Seat Adjustment Wiring Harness)
- 371 Ground Connection 6 (in Main Wiring Harness)
- 375 Ground Connection 10 (in Main Wiring Harness)
- 377 Ground Connection 12 (in Main Wiring Harness)
- 688 Ground Connection 2 on Center Tunnel
- B298 Positive Connection 2 (30) (in Main Wiring Harness)
- B712 LIN Bus Connection 7 (in Main Wiring Harness)
- M61 Connection 1 (in Rear Seats Wiring Harness)
- * Climate Control, Comfort Climatronic
- *2 Refer to Applicable Wiring Diagram for Fuse Positions
- *3 From August 2011
- *4 From June 2014

 - ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink



Driver Side Rear Seat Adjustment Control Module

J876 Driver Side Rear Seat Adjustment Control Module


T8at 8-Pin Connector, In the Left Rear Seat

T18g 18-Pin Connector

V271 Left Rear Seat Blower Fan

V273 Left Rear Seat Backrest Blower Fan

136 Ground Connection 2 (in Heated Seats Wiring Harness)

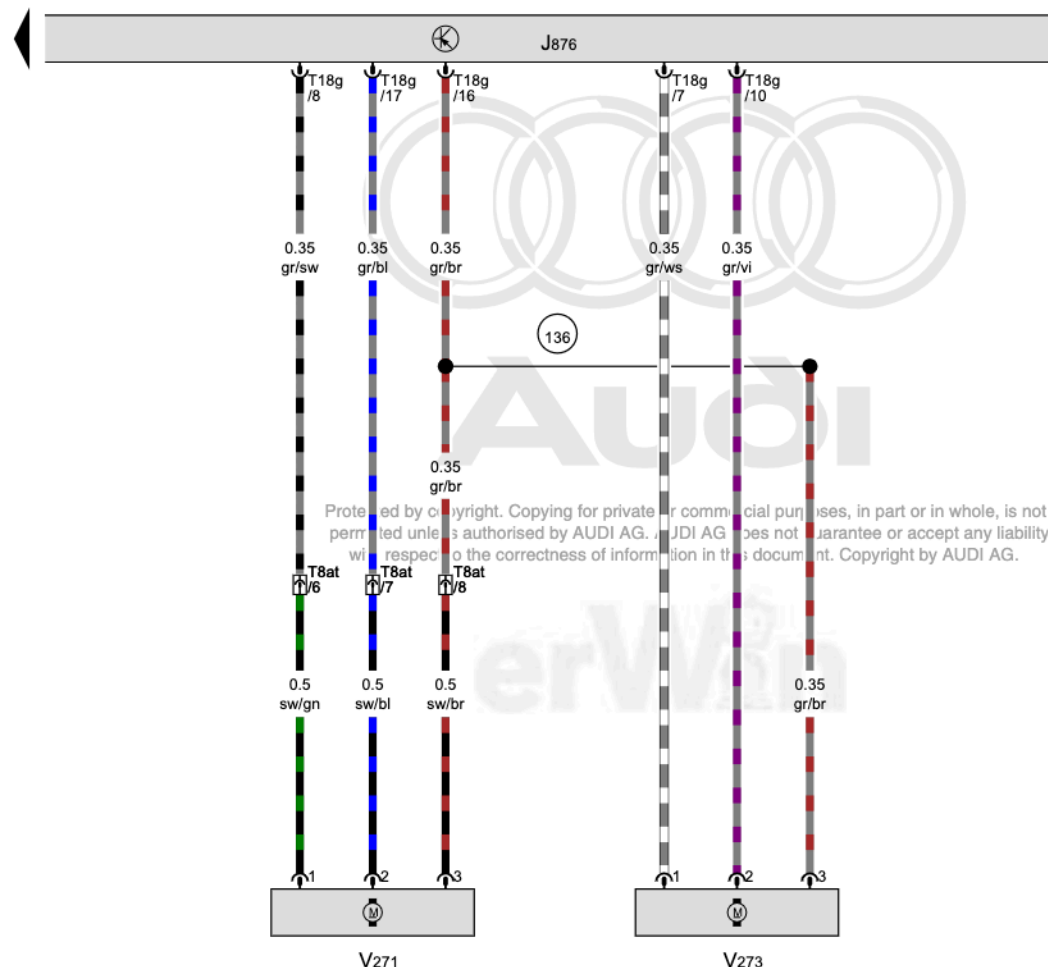


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Driver Side Rear Multi-Contour Seat Control Module, Valve Block 1 in Driver Side Rear Seat, Left Rear Multi-Contour Seat Compressor

- J875 Driver Side Rear Multi-Contour Seat Control Module
- N479 Valve Block 1 in Driver Side Rear Seat
- T6bu 6-Pin Connector, In the Left Rear Seat
- V441 Left Rear Multi-Contour Seat Compressor

- 166 Ground Connection 2 (in Rear Seat Adjustment Wiring Harness)
- M62 Connection 2 (in Rear Seats Wiring Harness)
- M63 Connection 3 (in Rear Seats Wiring Harness)

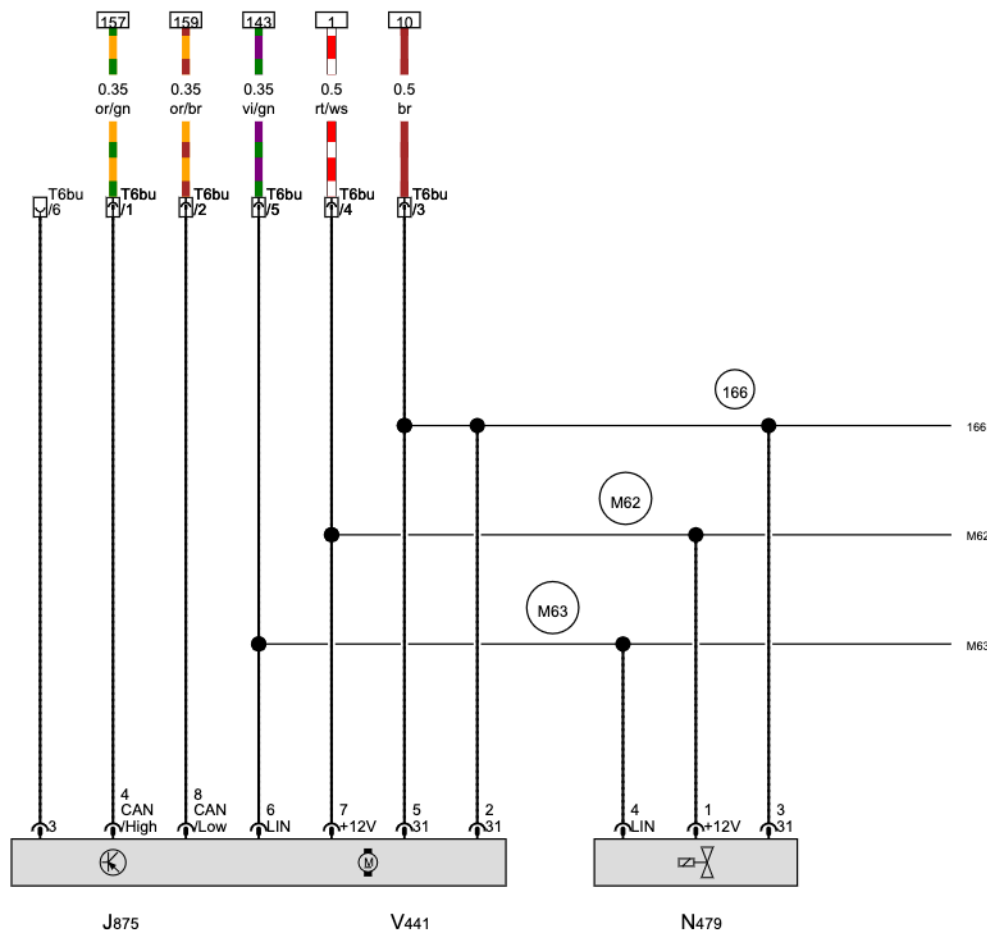

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Valve Block 2 in Driver Side Rear Seat, Valve Block 3 in Driver Side Rear Seat


N480 Valve Block 2 in Driver Side Rear Seat

N525 Valve Block 3 in Driver Side Rear Seat

166 Ground Connection 2 (in Rear Seat Adjustment Wiring Harness)

M62 Connection 2 (in Rear Seats Wiring Harness)

M63 Connection 3 (in Rear Seats Wiring Harness)

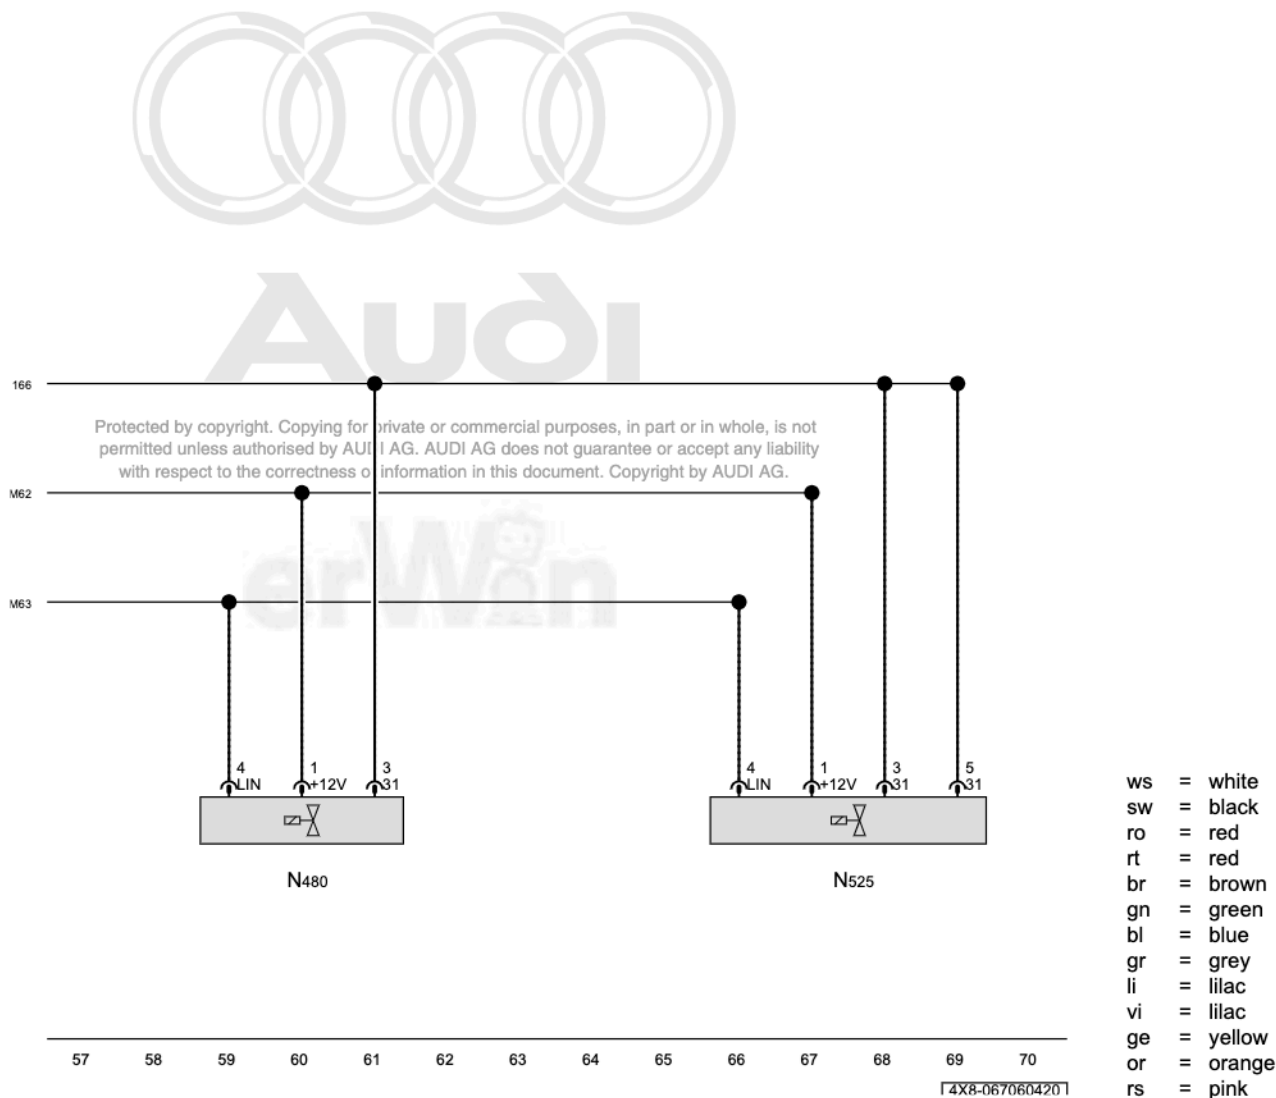

Passenger Side Rear Seat Adjustment Control Module, Circuit Breaker 2


- J877 Passenger Side Rear Seat Adjustment Control Module
- S362 Circuit Breaker 2, On the Relay and Fuse Panel in the Luggage Compartment, Right
- T17v 17-Pin Connector, In the Coupling Point for the Right Rear Seat
- T18h 18-Pin Connector
- 165 Ground Connection 1 (in Rear Seat Adjustment Wiring Harness)
- M61 Connection 1 (in Rear Seats Wiring Harness)
- * From August 2011



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


erWin

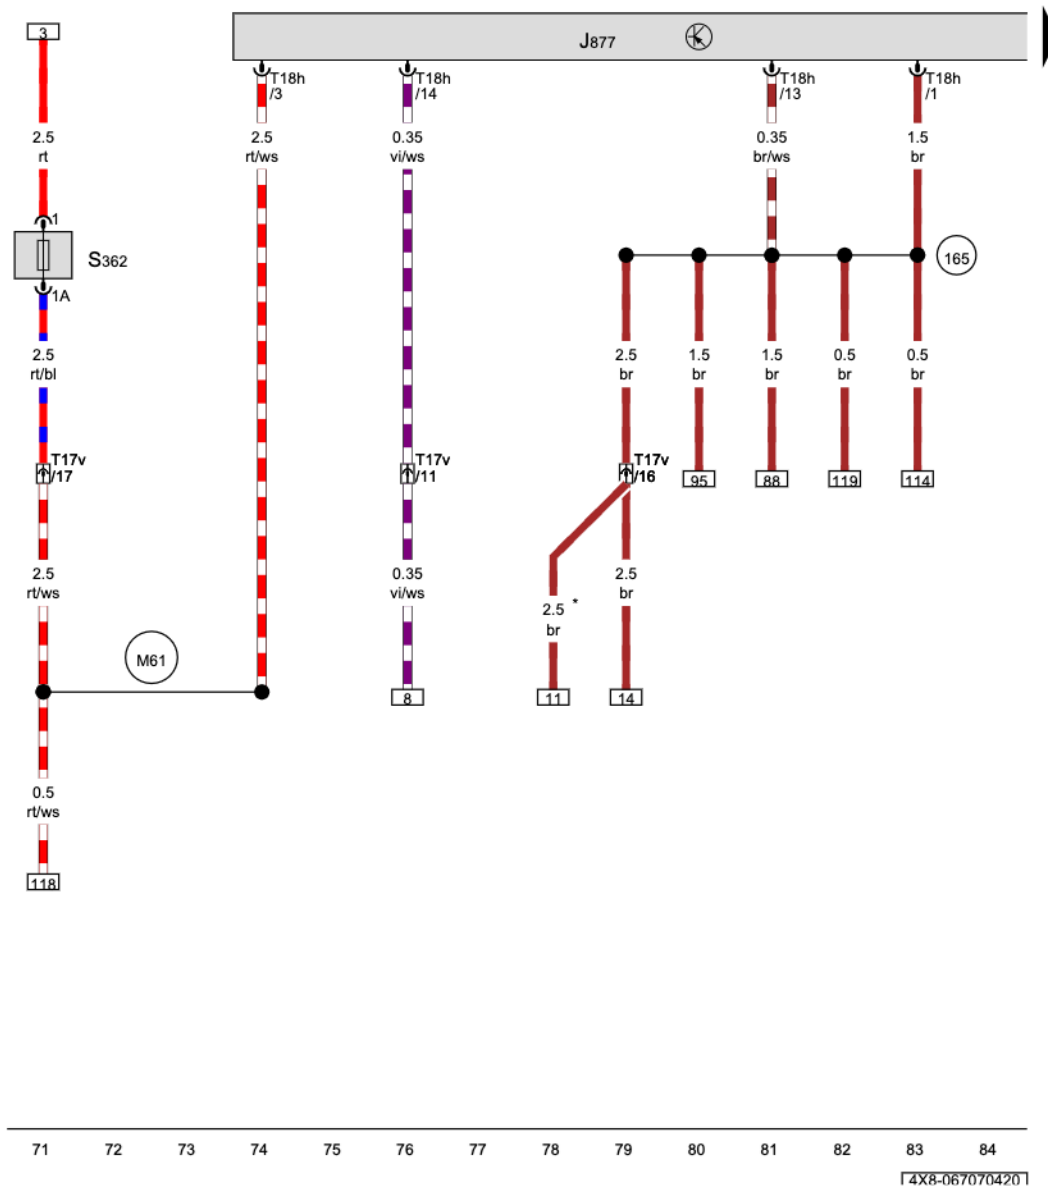

Passenger Side Rear Seat Adjustment Control Module

- G95 Right Rear Heated Seat Temperature Sensor
- J877 Passenger Side Rear Seat Adjustment Control Module
- T2rl 2-Pin Connector
- T2rn 2-Pin Connector, Black
- T4fe 4-Pin Connector, In the Right Rear Seat
- T8au 8-Pin Connector, In the Right Rear Seat
- T18h 18-Pin Connector
- Z12 Right Rear Bench Seat Heating Element
- Z13 Right Rear Backrest Heating Element
- Z88 Passenger Side Rear Seat Left Bolster Heating Element
- Z89 Passenger Side Rear Seat Right Bolster Heating Element
- Z90 Passenger Side Rear Seat Left Backrest Bolster Heating Element
- Z91 Passenger Side Rear Seat Right Backrest Bolster Heating Element

- 96 Ground Connection 1 (in Heated Seats Wiring Harness)
- 145 Ground Connection 3 (in Heated Seats Wiring Harness)
- O12 Connection 1 (in Heated Seats Wiring Harness)
- O13 Connection 2 (in Heated Seats Wiring Harness)

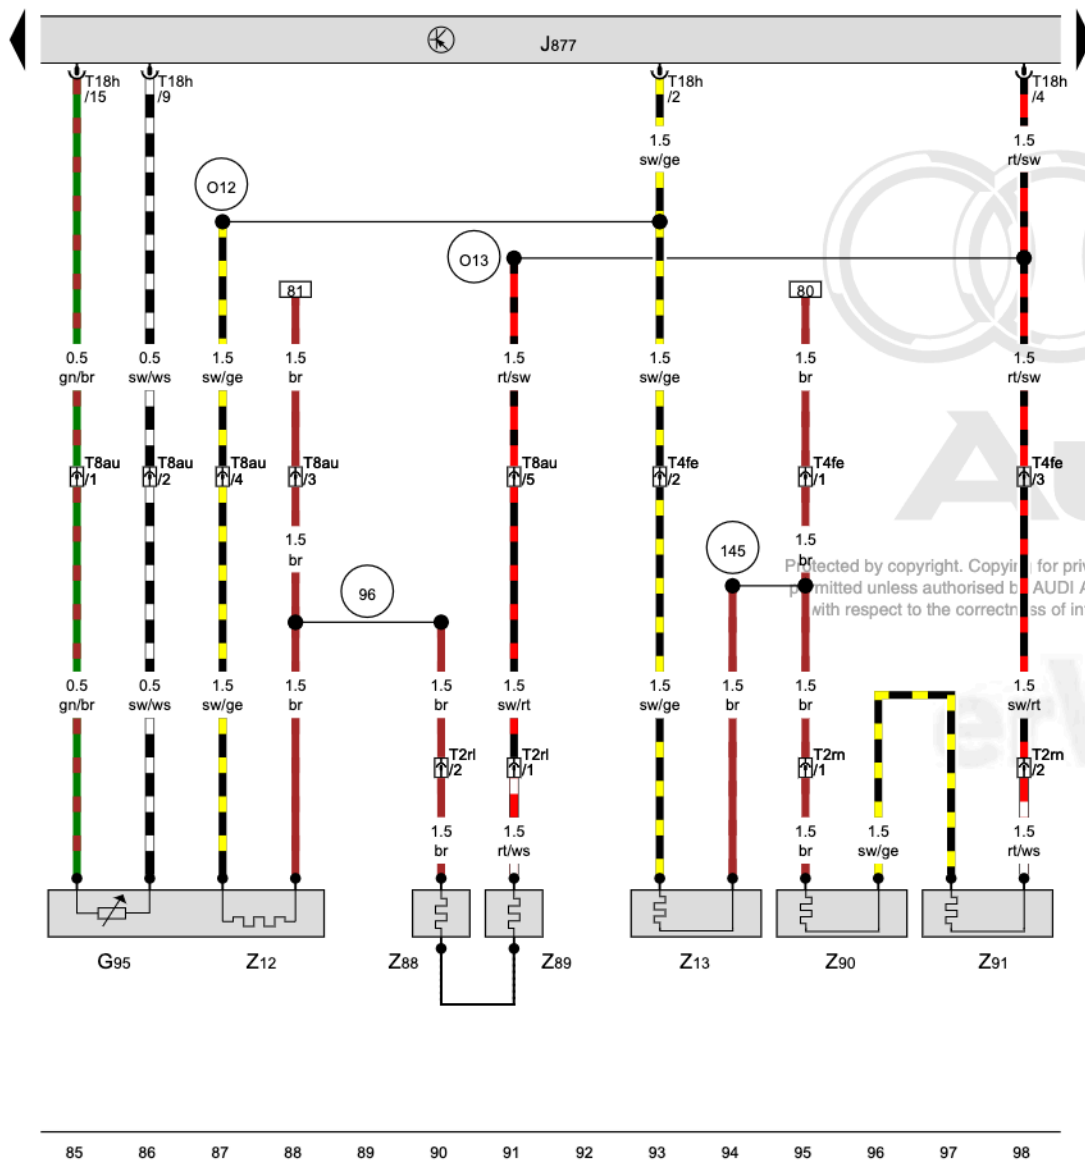


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

14X8-0670804201

Passenger Side Rear Seat Adjustment Control Module

- J877 Passenger Side Rear Seat Adjustment Control Module
- T8au 8-Pin Connector, In the Right Rear Seat
- T18h 18-Pin Connector
- V270 Right Rear Seat Blower Fan
- V272 Right Rear Seat Backrest Blower Fan

136 Ground Connection 2 (in Heated Seats Wiring Harness)

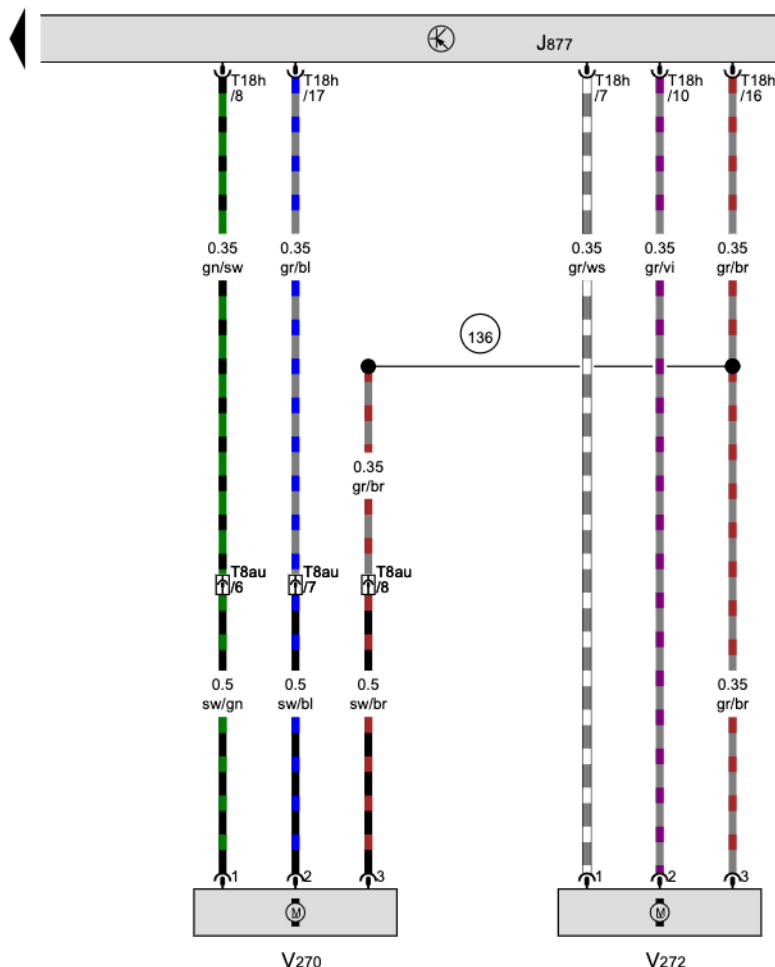

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

99 100 101 102 103 104 105 106 107 108 109 110 111 112

14X8-0670904201

Passenger Side Rear Multi-Contour Seat Control Module,
Valve Block 1 in Passenger Side Rear Seat, Right Rear
Multi-Contour Seat Compressor


J874 Passenger Side Rear Multi-Contour Seat Control Module
N481 Valve Block 1 in Passenger Side Rear Seat
T6bv 6-Pin Connector, In the Right Rear Seat
V442 Right Rear Multi-Contour Seat Compressor

166 Ground Connection 2 (in Rear Seat Adjustment Wiring Harness)

M62 Connection 2 (in Rear Seats Wiring Harness)

M63 Connection 3 (in Rear Seats Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

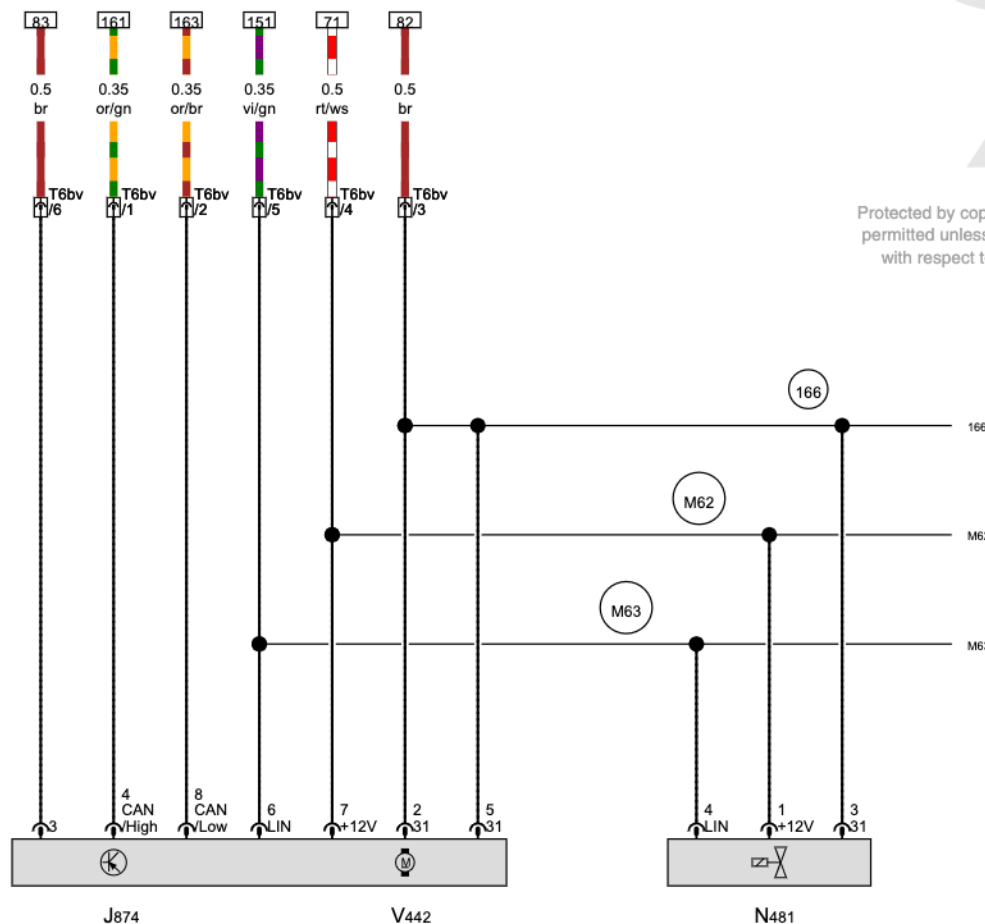

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Valve Block 2 in Passenger Side Rear Seat, Valve Block 3 in Passenger Side Rear Seat


N482 Valve Block 2 in Passenger Side Rear Seat

N526 Valve Block 3 in Passenger Side Rear Seat

166 Ground Connection 2 (in Rear Seat Adjustment Wiring Harness)

M62 Connection 2 (in Rear Seats Wiring Harness)

M63 Connection 3 (in Rear Seats Wiring Harness)

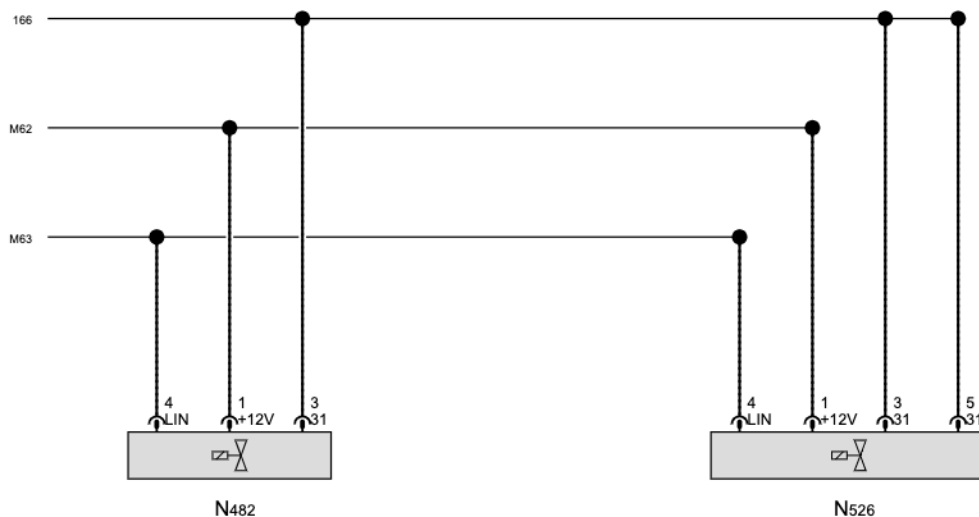

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Left Rear Seat Massage Button, Right Rear Seat Massage Button

- E409 Left Rear Seat Massage Button
- E410 Right Rear Seat Massage Button
- ST1 Fuse Panel 1
- SF3 Fuse 3 (On Fuse Panel F)
- T4es 4-Pin Connector
- T4et 4-Pin Connector
- T17u 17-Pin Connector, In the Coupling Point for the Left Rear Seat
- T17v 17-Pin Connector, In the Coupling Point for the Right Rear Seat
- T17x 17-Pin Connector

- 51 Ground Connection in Luggage Compartment, Right
- 387 Ground Connection 22 (in Main Wiring Harness)
- 416 Ground Connection (in Rear Armrest Wiring Harness)
- M93 Connection 2 (in Rear Armrest Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions

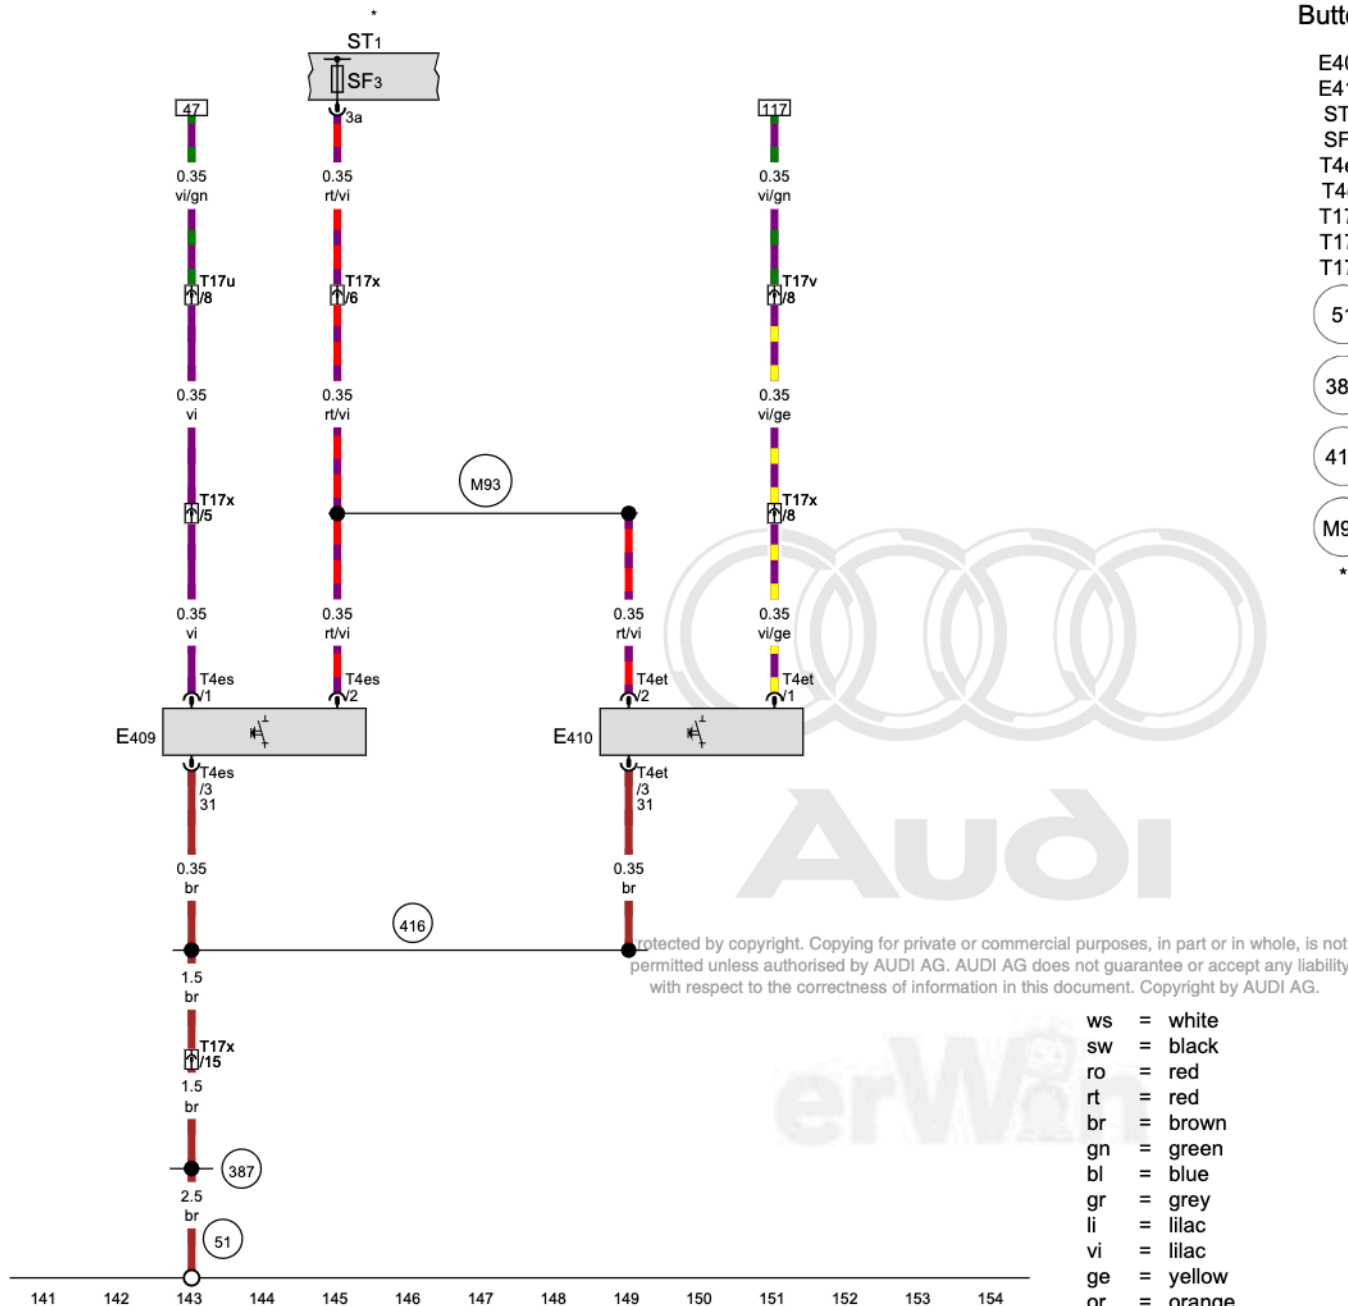


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

14X8-0671204201

Data Bus on Board Diagnostic Interface

- J533 Data Bus on Board Diagnostic Interface
- T17u 17-Pin Connector, In the Coupling Point for the Left Rear Seat
- T17v 17-Pin Connector, In the Coupling Point for the Right Rear Seat
- T32b 32-Pin Connector
- T46a 46-Pin Connector
- T46b 46-Pin Connector
- TV34 Comfort System CAN Bus High Wire Junction
- TV38 Comfort System CAN Bus Low Wire Junction
- TV80 Comfort System CAN Bus High Wire Junction 2
- TV83 Comfort System CAN Bus Low Wire Junction 2

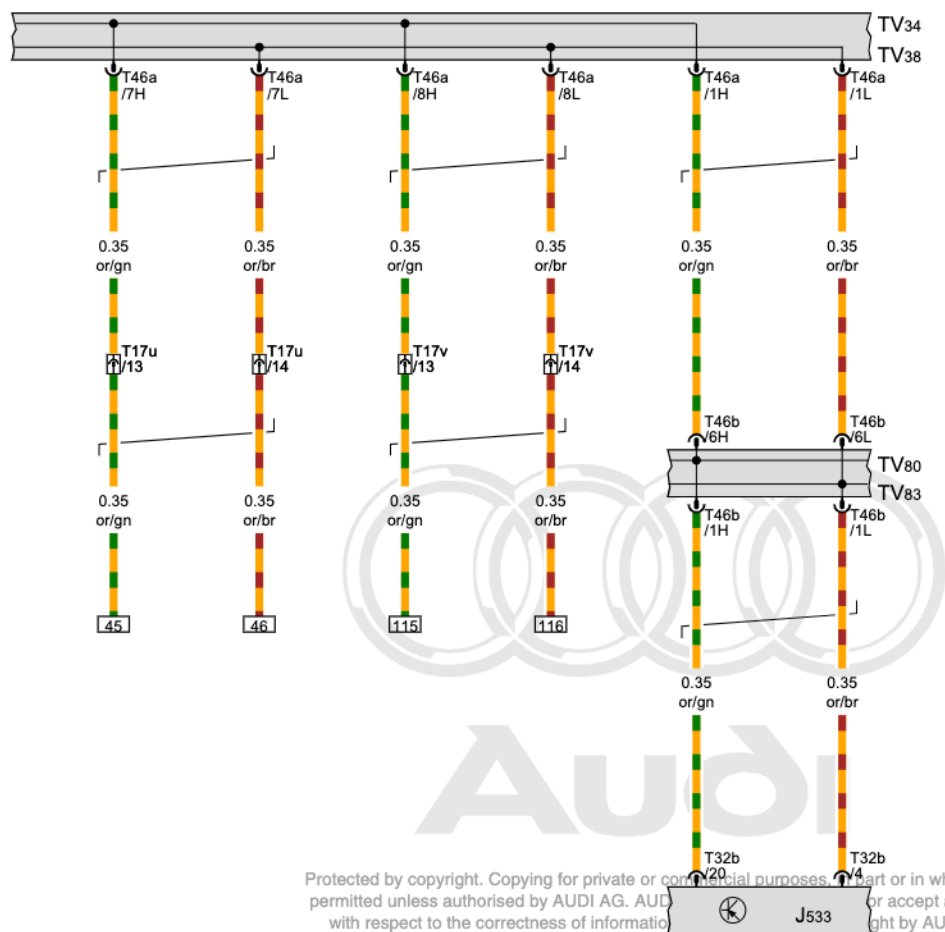

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink